

TO PROGRAM YOUR REMOTE

1) **Press** and hold the "P" button for about 5 seconds. When all LEDs illuminate release the button.

2) **LED #2** should be blinking, press and release the "P" button.

3) **LED #4** should be blinking, press and release the "P" button

4) **LED #2 and #6** should be blinking, press and release the "P" button.

5) **LED #4 and #6** should be blinking, press and release the "P" button.

6) **LED #7** should be blinking. While LED #7 is blinking, press and hold the desired button on the transmitter. When the LED #7 blinks rapidly, release the transmitter button. The opener has now learned the particular code of this transmitter. Press and release the "P" button. This stores the code in memory.

8) **LED #8** should be illuminated. This means the operator is back to normal operating mode and you are finished.

Multiple Transmitters:

1) Connect the programming cable to both transmitters. The cable plugs in above the batter behind the back cover. Or the pin interface is on either side of the remote (depending on the model you have).

2) Press and hold the button that is already programmed. The indicator light will blink.

3) While holding that button down, press and hold the button on the new or second transmitter. Code transfer will occur in approximately 2 seconds when the indicator light on the new transmitter stays on.